

Not sure what size lug nut cover to get?

Simply measure the size of your lug nut using a socket wrench. The size marked on the wrench corresponds to the size of lug nut cover that will fit. Keep in mind that nut covers come in both standard and metric sizes. Most Unimount wheels use 33 mm nut covers and most Stud-Pilot wheels use 1 1/2" nut covers. Thread on nut covers require a minimum of 1/2" stud thread to hold them on properly.

