




Installation Instructions for Model 419 and 519 BAD BOY™

Your purchase of a Wolo Bad Boy Horn is a perfect choice to complement your vehicle. Wolo's products are manufactured with the finest materials. Each horn is tested to insure it meets all manufacturing specifications, before it is packaged. If you need help installing this product, our technicians are available to answer your questions, Monday through Friday from 9 AM to 4 PM EST by calling 1-888-550-HORN (4676).


MOUNTING HORN (Choose either method Fig. A or Fig. B)

1. Mount the Bad Boy Horn vertically when possible in a dry location, safe from engine exhaust heat and moving parts.
2. Drill a 5/16" hole at the mounting location. Secure horn with method shown in Fig. A or Fig. B.
3. Fig A: Install the head of the bolt into the slot of the mounting bracket. Secure the horn using the lock washer/nut provided.
4. Fig B: Install the bolt into the mounting bracket as shown in Fig. B. Secure the horn using the lock washer/nut provided.

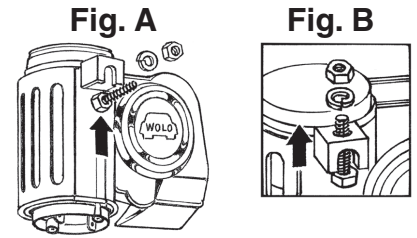

ELECTRICAL CONNECTIONS FOR USING A NEW HORN BUTTON SWITCH (Fig. C)

5. Install the relay provided in a dry location with the terminals facing downward near the horn.
6. Connect relay terminal 87 to Bad Boy's positive (+) motor terminal. Use 16 gauge wire or heavier.
7. Connect relay terminal 85 to the horn button switch (not provided). The other terminal of the horn switch is connected to ground, any metal body bolt that is clean of paint and rust. Use 18 gauge wire or heavier.
8. Connect relay terminal 30/86 to positive (+) 12-volts such as battery, alternator, etc. Use 16 gauge wire or heavier. Protect the electrical circuit with a twenty (20)-amp fuse (not included).

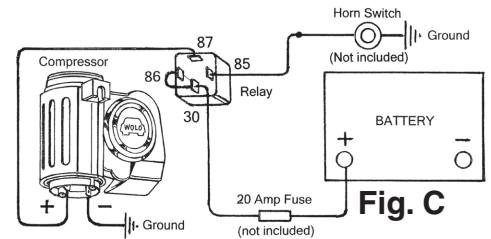


RECAP OF RELAY TERMINAL CONNECTIONS •

Terminals 30/86: the two terminals are connected to 12-volts positive (+) using a fuse. • Terminal 85: is connected to horn switch. • Terminal 87; is connected to the horns (+) motor terminal


VEHICLE & MOTORCYCLE ELECTRICAL CONNECTION – USING FACTORY HORN SYSTEM (TWO WIRE SYSTEM) (Fig. D)

9. **IMPORTANT:** You are required to use the relay supplied with this horn kit to protect the factory horn button switch and wiring. The original factory horn draws less current and some manufacturers do not provide a relay in the horn circuit.
10. Remove the two (2) wires from the factory horn.
11. Connect relay terminal 85 to one of the factory horn wires. **Note:** It does not make a difference which wire.
12. Connect relay terminal 86 to the other factory horn wire.
13. Connect relay terminal 30 to positive (+) 12-volts battery, alternator. Use 16-gauge or heavier wire. Protect the electrical circuit and vehicle with a 20-amp fuse as shown (fuse not included).
14. Connect relay terminal 87 to the positive terminal at the bottom of the compressor. Use no less than 16 gauge wire.
15. Connect the (-) terminal at the bottom of the compressor to ground any clean metal body bolt or the (-) post of the battery. Use no less than 16-gauge wire.

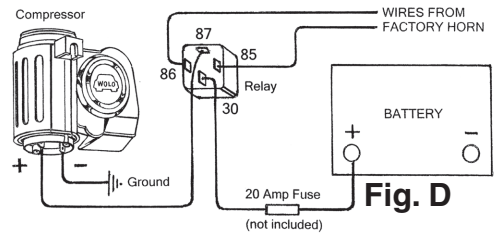

ELECTRICAL CONNECTION – USING FACTORY HORN SYSTEM (ONE WIRE SYSTEM) (Fig. E)

16. **IMPORTANT:** You are required to use the relay supplied with this horn kit to protect the factory horn button switch and wiring. The original factory horn draws less current, and some manufacturers do not provide a relay in the horn circuit.
17. Remove the wire from the factory horn.
18. Connect the horn wire to relay terminal 85.
19. Connect relay terminal 86 to compressor to ground any clean metal body bolt or the (-) post of the battery. Use 16-gauge wire or heavier.
20. Connect relay terminal 30 to positive (+) 12-volts battery, alternator. Use 16-gauge or heavier wire. Protect the electrical circuit and vehicle with a 20-amp fuse as shown (fuse not included).
21. Connect relay terminal 87 to the horns compressor's positive (+) terminal. Use 16-gauge wire or heavier.
22. Connect the compressor negative (-) to ground any clean metal body bolt or the (-) post of the battery. Use 16-gauge wire or heavier.

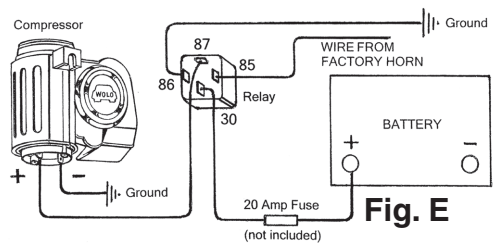

WARRANTY

Wolo Manufacturing Corporation ("Wolo") warrants the original purchaser, for three months from the date of purchase, that this product is free from defects in workmanship and materials. If there is such a proven defect, Wolo, at its option, will either repair or replace the item free of charge, if it is returned to Wolo within three months from the date of purchase together with proof of purchase as described below. Wolo reserves the right to inspect any defect prior to settling any warranty claim by repair or replacement. This warranty is limited as provided above and Wolo will not be responsible for fire or other casualty or accident, due to neglect, abuse, abnormal use, modifications, faulty installation of this product, or natural causes.

ANY EXPRESSED WARRANTY NOT PROVIDED HEREIN IS EXCLUDED AND DISCLAIMED. THE IMPLIED WARRANTIES OF MERCHANTABILITY AND OF FITNESS FOR A PARTICULAR PURPOSE ARE EXPRESSLY LIMITED TO A TERM OF THREE (3) MONTHS. UNDER NO CIRCUMSTANCES SHALL WOLO BE LIABLE TO PURCHASER OR ANY OTHER PERSON FOR ANY SPECIAL OR CONSEQUENTIAL DAMAGES, WHETHER ARISING OUT OF BREACH OF WARRANTY OR OTHERWISE.

To obtain warranty service, return the product prepaid, and include the original bill of sale showing the date of purchase. Provide with the return a brief description of the problem with a daytime telephone number. Also, include with the return a check or money order in the amount of \$20.00 to cover return shipping.

Mail to:
Wolo Manufacturing Corp.
Attn: Warranty Service
One Saxwood Street
Deer Park, NY 11729