

Stainless Steel Accessories

Air intake grille, kw, t880 - 2014+ installation instructions


11/19/2020

1. Remove OEM plastic grille by pulling, some effort may be required.

NOTE: There are two different thicknesses of spacers!

- (2) 1/2" spacers per side – used towards the front of truck hole locations
- (4) 1/4" spacers per side

BACK OF DRIVER SIDE SHOWN FOR SPACER LOCATION

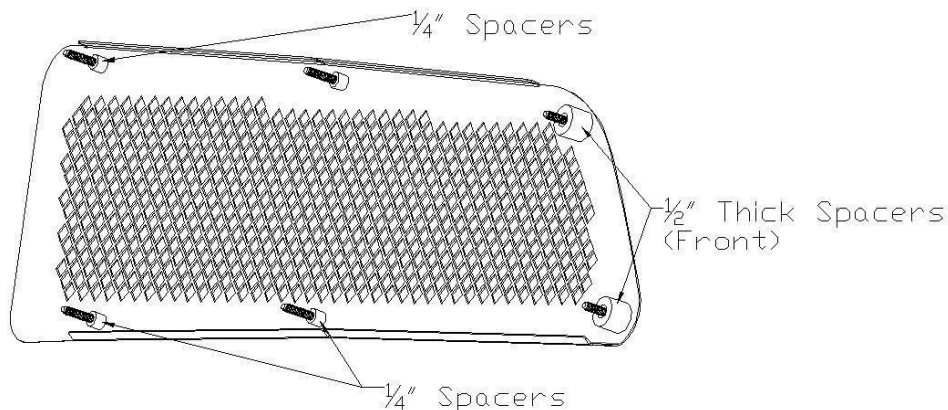

2. NOTE: As a helpful installation tip, the spacers can be secured to the grille intake with silicone and left to cure prior to install. Tape can also be used to secure the spacers.
3. Peel plastic from along bends to avoid pinching.
4. Hold grille intake in the recessed pockets, ensuring it's centered in the opening.
5. Drill 1/8" holes while holding in place and secure with supplied #8 screws.
6. NOTE: Installation tip. Don't fully tighten screws until plastic is peeled. Once plastic is peeled, then tighten all screws.
7. DO NOT over tighten the screws to avoid deformation of the grille.
8. Wipe with glass cleaner and soft cloth if necessary.

Page 1 of 1

11192020



United Pacific

Reliable. Hardworking. Quality Products.