


KENWORTH W990 INTAKE LIGHTING

Installation

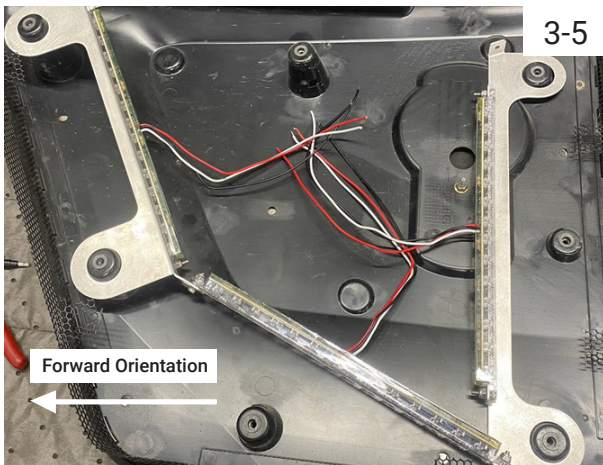

1. Remove the W990 side air intakes with the 4 bolts from the inside of the hood. Ensure the air intake is secured prior to removal of the bolts to prevent damage from the part falling.
2. Remove 7 bolts to split each intake in half to gain access to the internal locating cones
3. Place the brackets on top of the locating cones as per the schematic.
4. With both brackets installed, the 3rd 12" LED can be installed using the angled tabs.
5. Wire the 3 lights together in the orientation requested by owner as the kit can be sold with all amber or 1 rear facing red LED.
6. Re-install intakes and replace double-sided tape holding it in place.
7. Recommended wiring to be routed under the fender liners and can be sliced into the side marker light or to be run on a separate circuit.