



Installation of Rear Cover-up Hub Covers for 33mm Hub Piloted Wheels • Model RW1015-015HK • Bracket RW015HRK

VERY IMPORTANT!

Read And Understand These Steps Before Installation.



TOOLS NEEDED

1/2" Open End Wrench, Phillips Screwdriver

- Rear Set Kit Model Number: RW1015-015HK
- Bracket Model Number: RW015HRK (Includes 2 brackets)

- Over-the-Lug Mounting for 33mm hub piloted wheels
- Patented

NOTE: Your wheels must have a minimum of 1/4" of excess stud sticking out past the wheel lug nuts. RealWheels recommends a minimum of 1/4" of excess stud sticking out past the wheel lug nuts. (See Photo A) When installing the bracket on wheel lug nuts with a minimum excess stud, bracket must engage completely into the stud threads. (See Photos B & C)

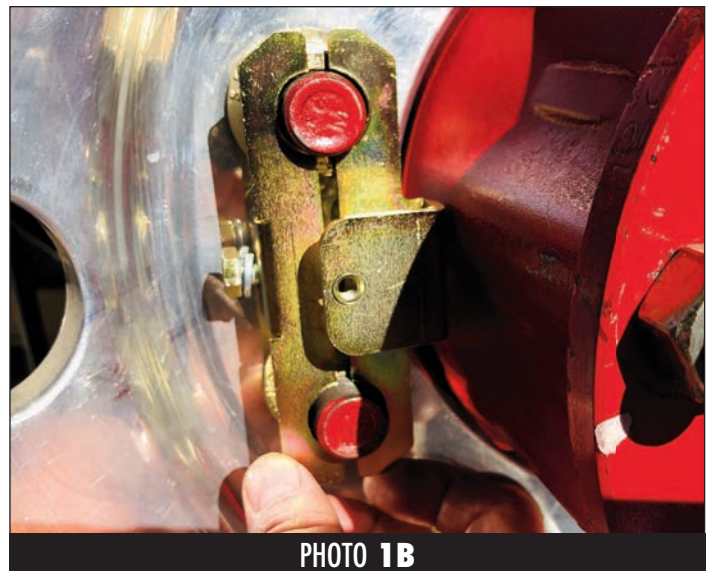
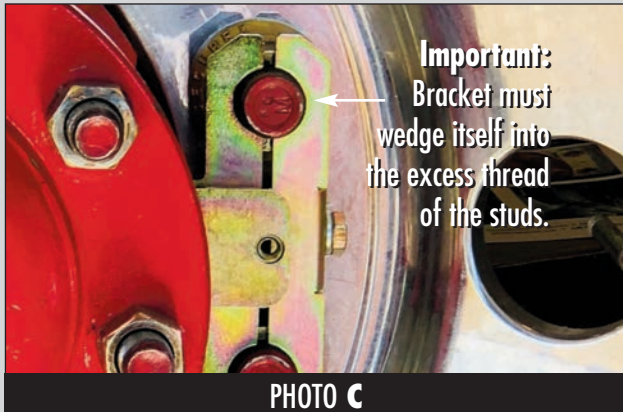


STEP 1

Placing Bracket Onto Wheel Studs

- Loosen the 5/16" bolt on the side of the Wedge Lock Bracket enough so it will slide onto two of the wheel studs. (See Photo 1A)
- Then place the Wedge Lock Bracket onto two of the wheel studs until it rests on top of the wheel lug nuts. (See Photo 1B)

Continued on Back...

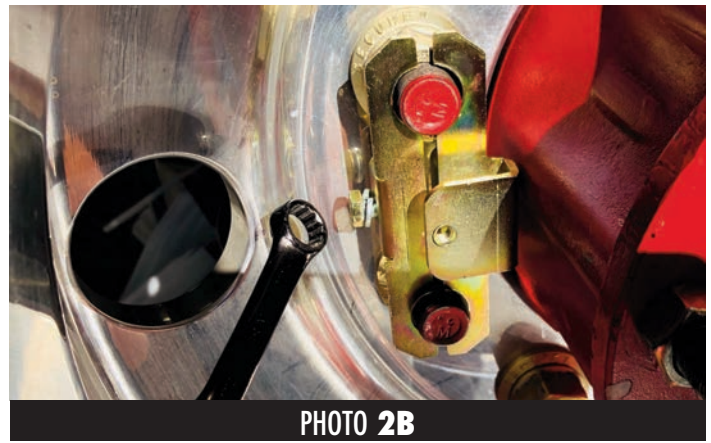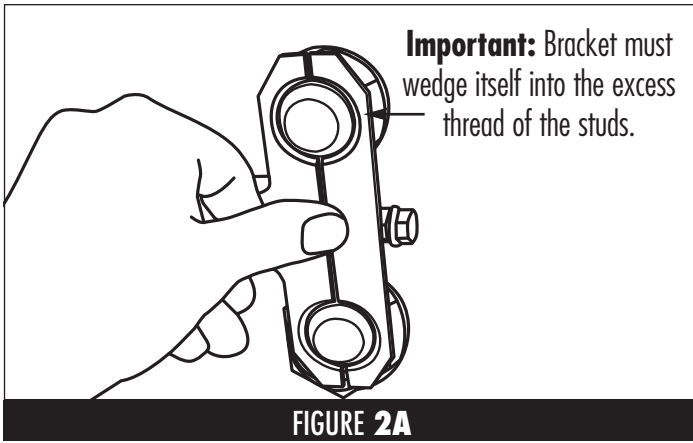

Step 2. Tightening Bracket Onto Wheel Studs

- Push and hold against the bracket making sure it is firmly on top of the wheel lug nuts. (See Figure 2A)
- Then hand tighten the 5/16" bolt to bring the two halves of the bracket closer together, and wedging itself into the excess thread of the studs. **NOTE:** One side of the bracket may raise up a little depending what thread of the stud it wedges into, this is normal.
- Next with a 1/2" open end wrench begin tightening the 5/16" bolt. (See Photo 2B) Make sure the bracket is flat across the face and wedging into the threads of the wheel studs, continue tightening until the wedge lock bracket is securely tight.
- Repeat Steps 1 and 2 for second bracket exactly opposite of first bracket. (See Photo 2C)



STEP 3 Mounting The Hub Cover

- Place Hub Cover onto the wheel making sure to align the holes in the Hub Cover with the threaded holes of the mounting brackets. (See Photo 3A)
- Then thread two Phillips head screws with star lock washers (See inset Photo) through the Hub Cover and into the threaded holes of the mounting brackets and tighten securely. (See Photo 3B)
- Repeat the same process on the other wheel and you're finished.

