

ITEM NO.	PART NO.	DESCRIPTION	QTY
1	M7631003CG	SUN VISOR PANEL	1
2	M7631003CD	SUN VISOR PANEL	1
3	K7631003BH	HARDWARE KIT INCLUDES:	
4	-	PR9631001-C00	1
5	-	PR9631003-D01	1
6	-	PR9631003-G01	1
7	-	PR9631003-D02	1
8	-	PR9631003-G02	1
9	-	LOCK WASHER 1/4" SS	4
10	-	FLAT WASHER 1/4" SS	16
11	-	HEX BOLT 1/4-20 X 1/2" LG	4
12	-	FLAT WASHER ID# 10 X OD 1/2" SS	16
13	-	TRUSS PHILLIPS #10-32NF X 1/2" SS	16
14	-	HEX. BOLT 1/4NC X 3/4"	4
15	-	NYLON LOCK NUT, 1/4-20 UNC	4
16	-	NYLON LOCK NUT #10-32NF SS	16
17	-	HEX. BOLT 1/4NC X 1"	4
18	-	LF.INSERT STL 1/4"-20NC X.160	8
19	-	TRUSS PHILIPS 1/4-20NCX1"SS	4

## TRUX ACCESSORIES

TITLE:  
 SUN VISOR  
 MACK VISION-PINNACLE-GRANITE UP TO 2006

SIZE DWG. NO.  
**ATSUN-M1**

NAME	DATE	REV	DATE
DRAWN BY P.W.	09-12-2014	PH1	-

SCALE: 1:8

WEIGHT: LBS

SHEET: 1 OF 1

## READ ALL INSTRUCTIONS BEFORE BEGINNING INSTALLATION

### INSTALLATION INSTRUCTIONS

- 1- ON A TABLE PREASSEMBLE THE SUN VISOR PANEL & THE BRACKETS.
- 2- IF FACTRY SUN VISOR EXISTS, PLEASE REMOVE IT THEN GO DIRECTLY TO STEP 11.
- 3- IF THERE IS NO EXISTING SUN VISOR, TEMPORARILY INSTALL THE SUN VISOR AT THE PROPER POSITION.
- 4- USING THE SUN VISOR, MARK BRACKETS HOLES.

#### ATTENTION


#### REMOVE SUN VISOR BEFORE DRILLING TO PREVENT DAMAGE

- 5- DRILL MARKED HOLES AT 25/64" (.390625") DIA.
- 6- INSTALL THE THREADED INSERT NUT.
- 7- REINSTALL THE SUN VISOR ON THE CAB.
- 8- MARK BOTH ENDS HOLES OF SUN VISOR ON CAB.

#### ATTENTION

#### REMOVE SUN VISOR BEFORE DRILLING TO PREVENT DAMAGE

- 9- DRILL MARKED HOLES AT 25/64" (.390625") DIA.
- 10- INSTALL THE THREADED INSERT NUT.
- 11- INSTALL THE SUN VISOR ONTO THE CAB.
- 12- TIGHTEN ALL BOLTS AND SCREWS FIRMLY.

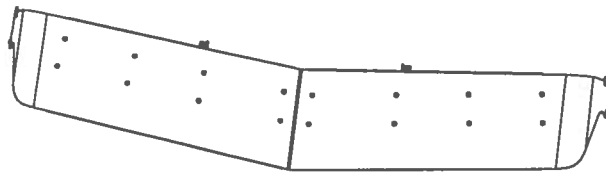

## TRUX ACCESSORIES

TITLE:

SUN VISOR

MACK VISION-PINNACLE-GRANITE UP TO 2006

SIZE DWG. NO.

**A** TSUN-M1

NAME	DATE	REV	DATE
DRAWN BY P.W.	09-12-2014	PH1	-
SCALE: 1:24	WEIGHT: LBS	SHEET: 1 OF 1	