


ASSEMBLY BACK VIEW

ITEM NO.	PART NO.	PART NO.	PART NO.	DESCRIPTION	QTY	TRUX ACCESSORIES			
1	M7131006SD	M7131005SD	M7131002SD	SUN VISOR PANEL	1	TITLE: SUN VISOR LOW ROOF PETERBILT 330-335-340-357-378-379 UP TO 2004			
2	M7131006SG	M7131005SG	M7131002SG	SUN VISOR PANEL	1				
3	K7131002BH	-	-	HARDWARE KIT INCLUDES	1				
4	-	-	-	PR9131002-D00	1	SIZE DWG. NO. A TSUN-P17, TSUN-P19, TSUN-P18			
5	-	-	-	PR9131002-G00	1				
6	-	-	-	PR9131002-C00	1	NAME DATE REV DATE			
7	-	-	-	WELL NUT 1/4"-20NC	12				
8	-	-	-	HEX. BOLT 1/4NC X 3/4"	8	DRAWN BY P.W. 26-09-2008 PH1 -			
9	-	-	-	FLAT WASHER 1/4" SS	23				
10	-	-	-	LOCK WASHER 1/4" SS	15	SCALE: 1:16 WEIGHT: LBS SHEET: 1 OF 1			
11	-	-	-	TRUSS PHILIPS 1/4"X 3/4"SS	15				
12	-	-	-	HEX NUT 1/4-20NC	11				

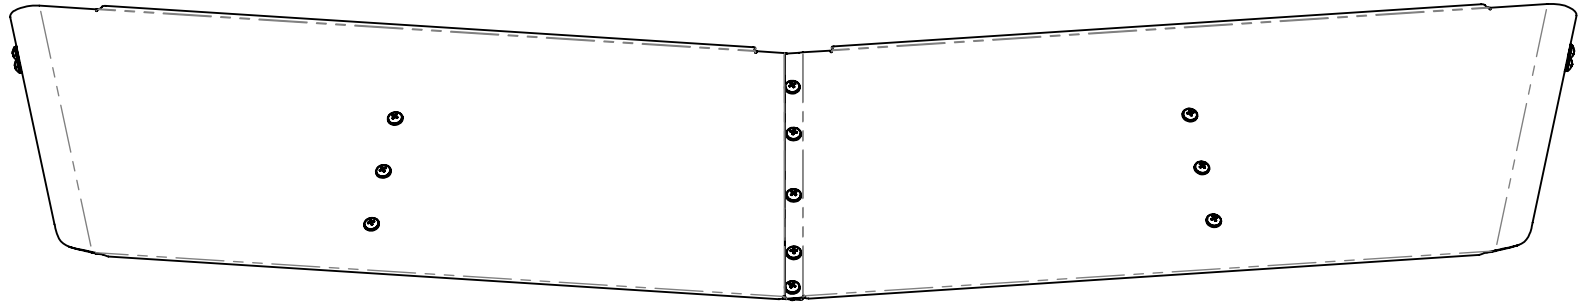

FRONT VIEW

READ ALL INSTRUCTIONS BEFORE BEGINNING INSTALLATION

INSTALLATION INSTRUCTIONS

- 1- REMOVE THE EXISTING SUN VISOR.
- 2- REDRILL EXISTING HOLES TO 1/2 in. AND INSERT WELLNUTS.
- 3- INSTALL THE BRACKETS ONTO THE CAB.
- 4- TEMPORARILY INSTALL THE SUN VISOR AS ILLUSTRATED
- 5- USING THE SUN VISOR, MARK OUT HOLES ON BOTH ENDS OF SUN VISOR.

ATTENTION


REMOVE SUN VISOR BEFORE DRILLING TO PREVENT DAMAGE

- 6- DRILL THE PREVIOUSLY MARKED OUT HOLES AT 1/2 IN. DIA.
- 7- INSERT THE WELLNUTS.
- 8- IF WITHOUT LIGHTS; SKIP TO STEP #12.
- 9- INSTALL THE LIGHTS ON SUN VISOR
- 10- CONNECT THE LIGHTS AND DIRECT WIRE TOWARDS CENTER.
- 11- FASTEN THE SUN VISOR USING THE FASTENING HARDWARE.
- 12- REINSTALL THE SUN VISOR ON THE CAB.

CAUTION

**IT IS THE RESPONSIBILITY OF THE INSTALLER TO
PLAN AHEAD THE ADEQUATE ELECTRICAL CONNECTION
ACCORDING TO THE STANDARDS OF THE TRUCK
MANUFACTURER AND DOT REGISTRATION.**

- 13- CONNECT LIGHTS HARNESS TO THE TRUCK.
- 14- TIGHTEN ALL BOLTS AND SCREWS FIRMLY.

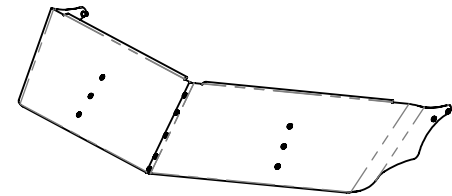

TRUX ACCESSORIES

TITLE:
SUN VISOR LOW ROOF
PETERBILT 330-335-340-357-378-379 UP TO 2004

SIZE DWG. NO.
A TSUN-P17, TSUN-P19, TSUN-P18

NAME	DATE	REV	DATE
DRAWN BY P.W.	26-09-2008	PH1	-
SCALE: 1:24	WEIGHT: LBS	SHEET: 1 OF 1	