

| ITEM NO. | PART NO.   | PART NO.   | PART NO.   | DESCRIPTION                    | QTY |
|----------|------------|------------|------------|--------------------------------|-----|
| 1        | M7131001SD | M7131003SD | M7131004SD | RH SUN VISOR PANEL             | 1   |
| 2        | M7131001SG | M7131003SG | M7131004SG | LH SUN VISOR PANEL             | 1   |
| 3        | K7131001BH | -          | -          | HARDWARE KIT INCLUDES          | 1   |
| 4        | -          | -          | -          | PR9131001-C00                  | 1   |
| 5        | -          | -          | -          | PR9131001-U00                  | 4   |
| 6        | -          | -          | -          | HEX. BOLT 1/4"NC X 1           | 12  |
| 7        | -          | -          | -          | LOCK WASHER 1/4" SS            | 17  |
| 8        | -          | -          | -          | WELL NUT 1/4"-20NC             | 16  |
| 9        | -          | -          | -          | TRUSS PHILIPS 1/4"-20NCX3/4"SS | 21  |
| 10       | B-W14S     |            |            | FLAT WASHER 1/4"               | 33  |
| 11       | B-HN14-20S |            |            | HEX NUT 1/4-20NC               | 17  |

## TRUX ACCESSORIES

TITLE:  
SUN VISOR  
PETERBILT 379 ULTRACAB UP TO 2004


SIZE DWG. NO. **TSUN-PET379HL, TSUN-PET379H, TSUN-PET379HG**

|            |      |     |      |
|------------|------|-----|------|
| NAME       | DATE | REV | DATE |
| DRAWN BY - | -    | PH1 | -    |

SCALE: 1:6

WEIGHT: LBS

SHEET: 1 OF 1

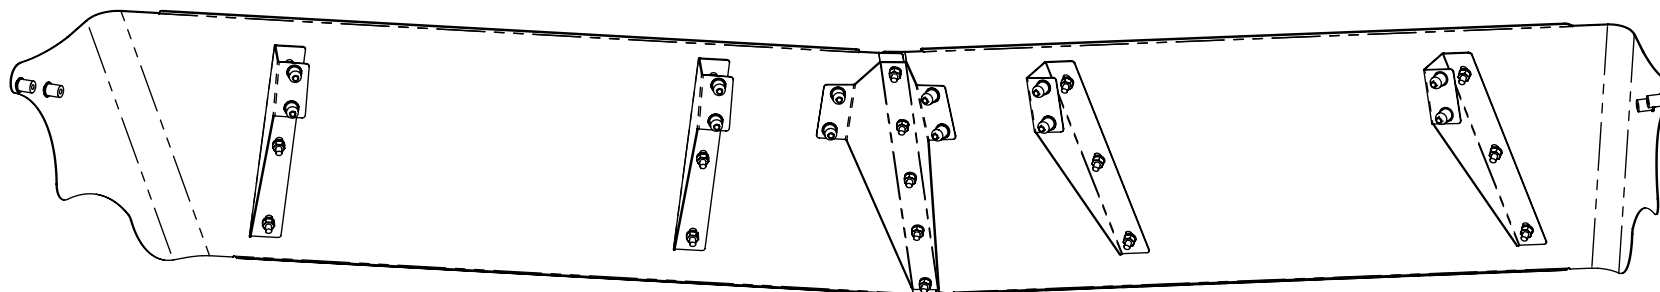

BACK VIEW OF SUN VISOR ASSEMBLY

## READ ALL INSTRUCTIONS BEFORE BEGINNING INSTALLATION

### INSTALLATION INSTRUCTIONS

- 1- REMOVE THE EXISTING SUN VISOR.
- 2- REDRILL EXISTING HOLES TO 1/2 in. AND INSERT WELLNUTS.
- 3- INSTALL THE BRACKETS ONTO THE CAB.
- 4- TEMPORARILY INSTALL THE SUN VISOR AS ILLUSTRATED
- 5- USING THE SUN VISOR, MARK BRACKET MISSING HOLES AND BOTH ENDS HOLES OF SUN VISOR.

### ATTENTION


#### REMOVE SUN VISOR TO PREVENT DAMAGE

- 6- DRILL THE MARKED HOLES AT 1/2 IN. DIA.
- 7- INSERT THE WELLNUTS.
- 8- IF WITHOUT LIGHTS; SKIP TO STEP #12.
- 9- INSTALL THE LIGHTS ON SUN VISOR.
- 10- CONNECT THE LIGHTS AND DIRECT WIRE TOWARDS CENTER.
- 11- FASTEN THE SUN VISOR USING THE FASTENING HARDWARE.
- 12- REINSTALL THE SUN VISOR ON THE CAB.

### CAUTION

**IT IS THE RESPONSIBILITY OF THE INSTALLER TO PLAN AHEAD THE ADEQUATE ELECTRICAL CONNECTION ACCORDING TO THE STANDARDS OF THE TRUCK MANUFACTURER AND DOT REGISTRATION.**

- 13- CONNECT LIGHTS HARNESS TO THE TRUCK.
- 14- TIGHTEN ALL BOLTS AND SCREWS FIRMLY.

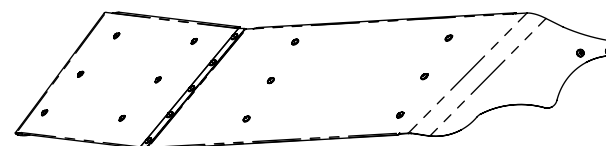

## TRUX ACCESSORIES

TITLE:

SUN VISOR

PETERBILT 379 ULTRACAB UP TO 2004

SIZE

A

DWG. NO.

**TSUN-PET379HL, TSUN-PET379H  
TSUN-379HG**

| NAME        | DATE        | REV | DATE          |
|-------------|-------------|-----|---------------|
| DRAWN BY    | -           | PH1 | -             |
| SCALE: 1:24 | WEIGHT: LBS |     | SHEET: 1 OF 1 |