

| ITEM No. | PART NUMBER | DESCRIPTION | QTY |
|----------|-------------|--------------------------------|-----|
| 1 | M7531002SG | SUN VISOR PANEL | 1 |
| 2 | M7531002SD | SUN VISOR PANEL | 1 |
| 3 | K7531001BH | HARDWARE KIT INCLUDES: | - |
| 4 | - | PR9531001-U01 | 2 |
| 5 | - | PR9531001-C01 | 1 |
| 6 | - | PR9531001-U02 | 2 |
| 7 | - | PR9531001-C02 | 1 |
| 8 | - | PR9531001-C03 | 1 |
| 9 | - | PR9531001-C04 | 1 |
| 10 | - | FLAT WASHER 1/4" SS | 18 |
| 11 | - | LOCK WASHER 1/4" SS | 18 |
| 12 | - | TRUSS PHILIPS 1/4"-20NCX3/4"SS | 18 |
| 13 | - | HEX NUT 1/4"-20NC | 16 |
| 14 | - | WELL NUT 1/4"-20NC | 2 |
| 15 | - | FLAT WASHER ID#10 X OD 1/2" SS | 8 |
| 16 | - | TRUSS PHILIPS #10-32NFX1 3/4"S | 4 |
| 17 | - | NYLON LOCK NUT #10-32NF SS | 4 |

TRUX ACCESSORIES

TITLE: SUN VISOR WESTERN STAR
CONSTELLATION GANGSTER SERIES
MIRROR ON DOOR 1998 & UP

SIZE DWG. NO.

A TSUN-W1 TSUN-W4 TSUN-W5

| NAME | DATE | REV | DATE |
|---------------|------------|-------------|---------------|
| DRAWN BY P.W. | 22-10-2008 | PH1 | - |
| SCALE: 1:10 | | WEIGHT: LBS | SHEET: 1 OF 1 |

READ ALL INSTRUCTIONS BEFORE BEGINNING INSTALLATION

INSTALLATION INSTRUCTIONS

- 1- REMOVE THE EXISTING SUN VISOR AND KEEP THE FASTENING HARDWARE.
- 2- INSTALL THE BRACKETS ONTO THE EXISTING HOLES.
- 3- USE THE FASTENING HARDWARE FROM PREVIOUS VISOR.
- 4- FASTEN CENTRAL SUPPORT LEG AS ILLUSTRATED.
- 5- TEMPORARILY INSTALL THE SUN VISOR ON THE BRACKETS AS ILLUSTRATED
- 6- FASTEN EACH SIDE OF SUN VISOR TO EXISTING HOLE USING EXISTING HARDWARE.
- 7- MARK EXTRA SIDE HOLES OF SUN VISOR.
- 8- MARK THE CENTRAL SUPPORT LEG AND REINFORCEMENT BARCKETS HOLES ONTO THE CENTRAL GASKET ON WINDSHIELD. **NOTE 8**

ATTENTION


REMOVE SUN VISOR TO PREVENT DAMAGE

- 9- DRILL THE CENTRAL SUPPORT LEG AND REINFORCEMENT BRACKETS HOLES AS MARKED AT 7/32" (.21875") DIA.
- 10- DRILL THE SIDE HOLES AS MARKED AT 1/2" DIA.
- 11- INSERT THE WELL NUTS IN THE HOLES.
- 12- SUN VISOR WITHOUT LIGHTS; SKIP TO STEP 17.
- 13- INSTALL THE LIGHTS ON SUN VISOR
- 14- CONNECT THE LIGHTS AND DIRECT WIRE TOWARDS CENTER.
- 15- INSTALL AND CONNECT THE CENTRAL LIGHT TO THE OTHERS.


CAUTION

IT IS THE RESPONSIBILITY OF THE INSTALLER TO PLAN AHEAD THE ADEQUATE ELECTRICAL CONNECTION ACCORDING TO THE STANDARDS OF THE TRUCK MANUFACTURER AND DOT REGISTRATION.

- 17- REINSTALL THE SUN VISOR ON THE CAB.
- 18- IF SUN VISOR HAS LIGHT, CONNECT LIGHTS HARNESS TO THE TRUCK.
- 19- TIGHTEN ALL BOLTS AND SCREWS.

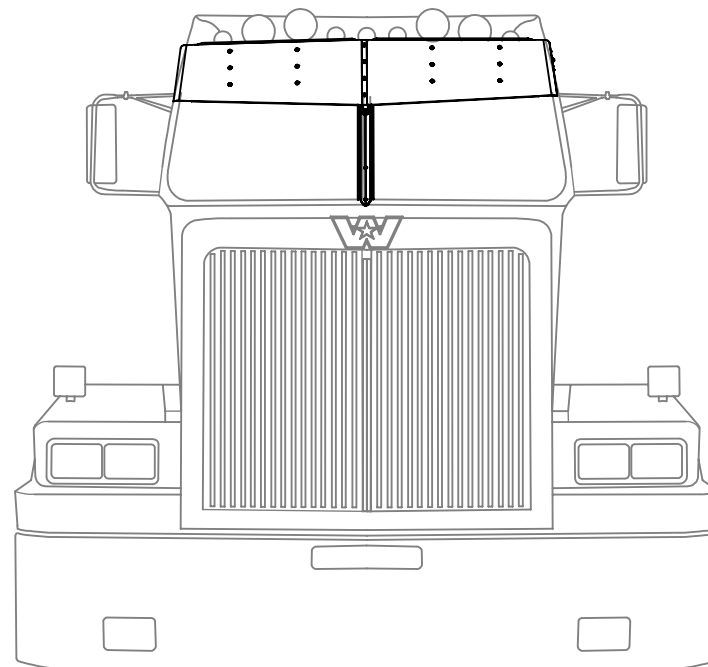

NOTE 8

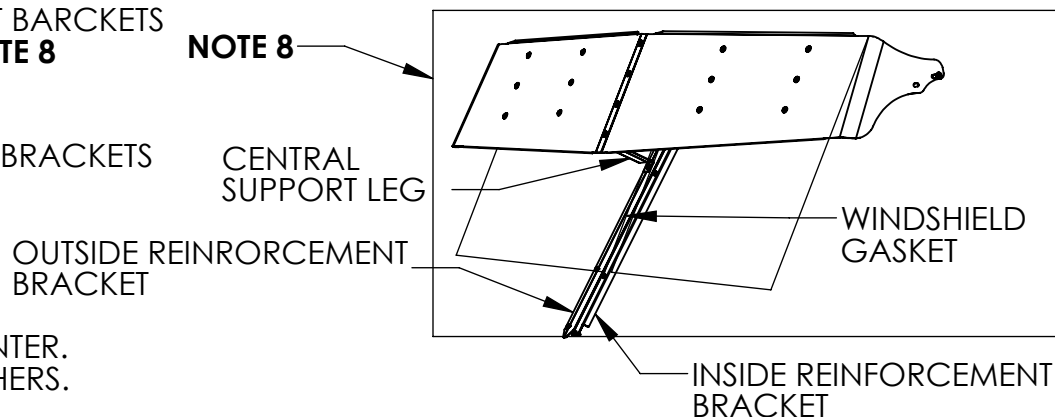

TRUX ACCESSORIES

TITLE: SUN VISOR WESTERN STAR
CONSTELLATION GANGSTER SERIES
MIRROR ON DOOR 1998 & UP

SIZE DWG. NO.
A TSUN-W1 TSUN-W4 TSUN-W5

| NAME | DATE | REV | DATE |
|---------------|-------------|---------------|------|
| DRAWN BY P.W. | 22-10-2008 | PH1 | - |
| SCALE: 1:1 | WEIGHT: LBS | SHEET: 1 OF 1 | |