
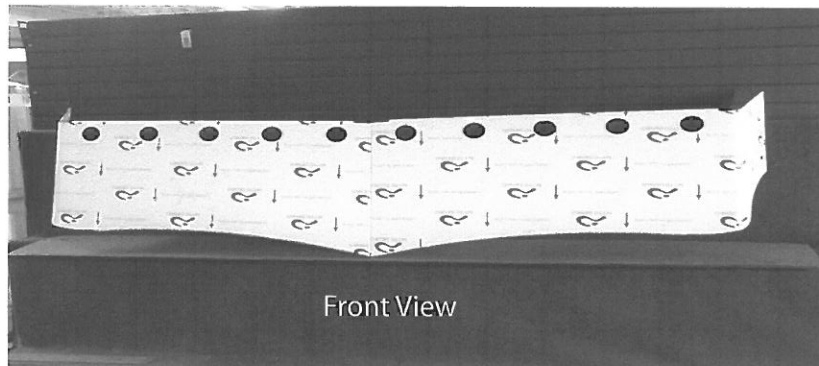


# FREIGHTLINER Century Class Condo Dropped Sun Visor #VF130003 Mounting Instructions

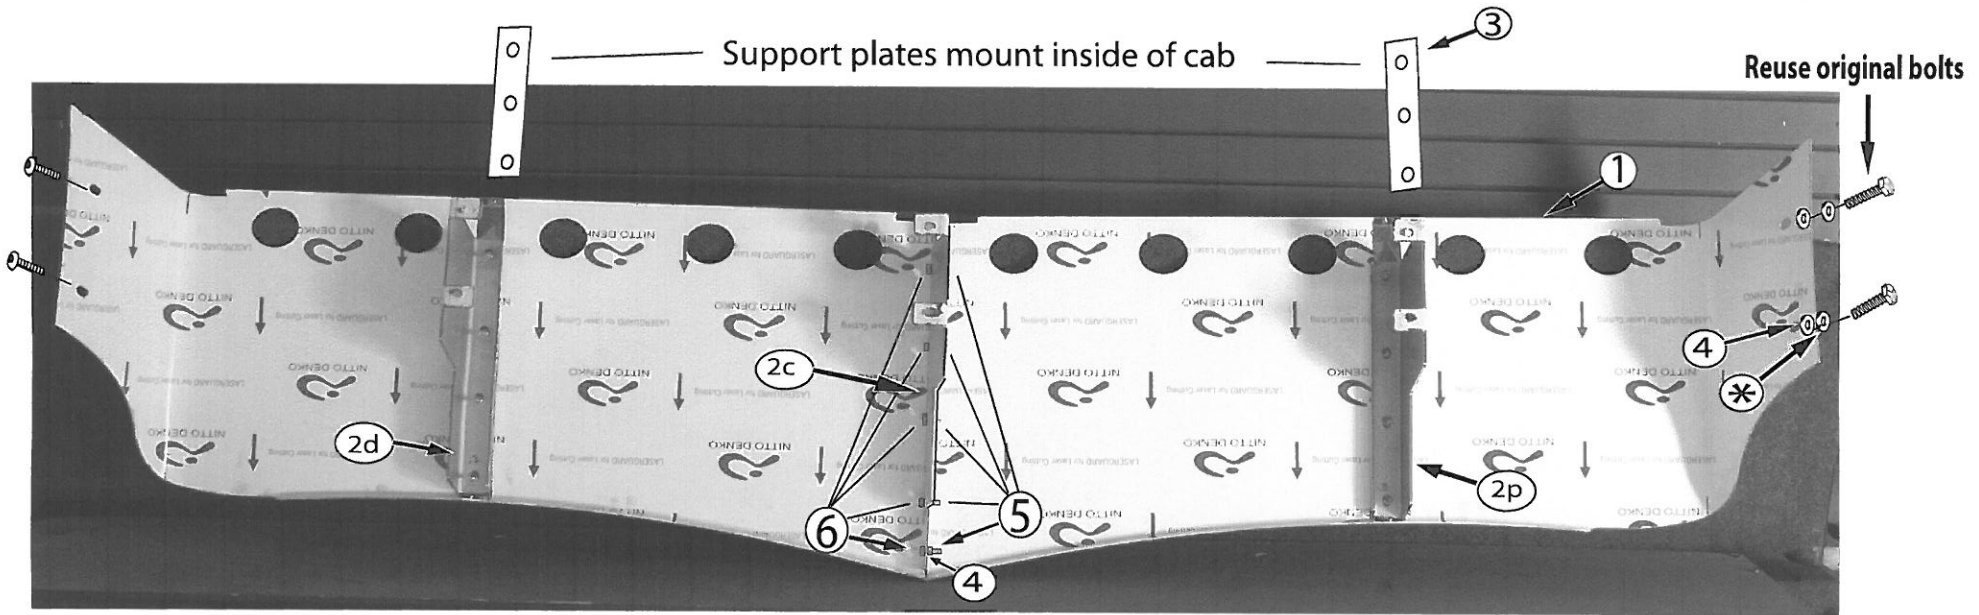

REVISION 7/11

Item	QTY	Description	Size
①	2	Visor Body Halves	18"
②d	1	Visor Bracket (VF130003-2) ds	11-3/4" x 1-7/8"
②p	1	Visor Bracket (VF130003-3) ds	11-3/4" x 1-7/8"
②c	1	Visor Bracket (VF13005-3) center	11-3/4" x 1-7/8"
③	2	Inside Support Plates (1702)	6 x 1-1/2"
④	22	Washers	1/4"
*	4	Lock Washers	1/4"
⑤	13	Lock Nut	1/4-20
⑥	12	Hex Head bolt	1/4-20 x 3/4"
⑦	6	Hex Head Bolt	5/16-18 x 1-1/2"
⑧	6	Nuts	5/16-18
⑨	12	Washers	5/16"

# **VF 130003**

## **FREIGHTLINER CENTURY CLASS CONDO DROPPED SUN VISOR**

**Read Entire Instruction Sheet before Beginning**

### **Steps:**

1. Unpack the carton and make sure all parts are in the box.
2. Remove your current visor:
  - a. Note: You will need to reuse the bolts which go into the cab of the truck.
3. Install the three new brackets onto the truck roof using the old mounting hardware.
  - a. Note: If the old visor mounted with only one center bracket you will need to use the 1702 plates inside the cab for support on the outer two brackets and the 5/16" bolts, nuts and washers.
4. Install the driver side portion of the visor first.
  - a. Mount the visor to the brackets with the 1/4" screws to hold the visor up. Do not tighten yet.
  - b. Screw the bolts in the end of the visor loosely. Do not tighten yet.
5. Repeat Step 4 for the passenger side.
6. Where the visors join together, screw in the top and bottom machine screws until almost tight.
7. Align the visor by snugly tightening one of the screws in each mounting bracket. Start from the outside of the cab and work toward the middle, one bolt per bracket at a time.
8. Remove the PVC coating from the visor.
9. Once the visor is in alignment, back out the top and bottom screws and apply silicon or Loctite then tighten all screws.
10. Install lights.