

VP 130008

579 Peterbilt Drop Visor Instructions

Read Entire Instruction Sheet Before Beginning




Safety Glasses	10mm Metric Wrench
Silicone or "Loctite [®] "	7/16" Wrench
Masking Tape	Phillips Head Screw Driver
3/8" Drill bit	Window Cleaner and Paper Towels

Steps:

- 1) Remove your current visor:
 - a) Note: You will need to reuse the bolts which go into the brackets.
- 2) Place plate covers on truck before mounting brackets are attached.
(Plates have adhesive backing for help in mounting).
- 3) Mount brackets to cab using factory bolts (from step 1) and through plates into factory holes already existing in cab.
- 4) With assistance of another person, mount visor to truck (using brackets) and align.
Mark holes in driver side and passenger side ears (side of cab) for drilling.
- 5) Remove visor, drill ear end with 3/8" drill bit.
Drilling requires you to have a "drill-stop", if you do not have one wrap tape around the (3/8") drill bit approximately **1/2 inch** from the tip of the bit, this will prevent "Breaking through" and damaging the interior headliner.
****Do not drill past second wall of outer cab!****
- 6) Install Rivnut to ear hole using rivnut tool. (see diagram on reverse for rivnut tool use).
- 7) Re-mount visor to truck (do not fully tighten in this step). Where the visors join together, screw in the top and bottom machine screws until finger-tight. Visor halves join together with center bracket. Mount center bracket first, then mount outer brackets.
- 8) Mount bolts through ear holes & align.
- 9) Remove the PVC coating from the visor.
- 10) Once the visor is in alignment, tighten the machine screws using Nylock nuts (provided).
- 11) We recommend that you use silicone or Loctite[®] on each of the screws to prevent loosening from over the road use.
- 12) Wipe away fingerprints with window cleaner.

VP130008 Peterbilt 579 Visor

Drop Visor - 2013 Raised Roof INSTALLATION INSTRUCTIONS

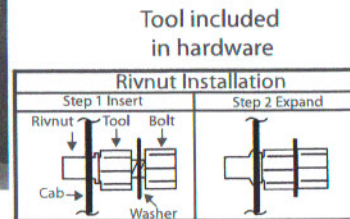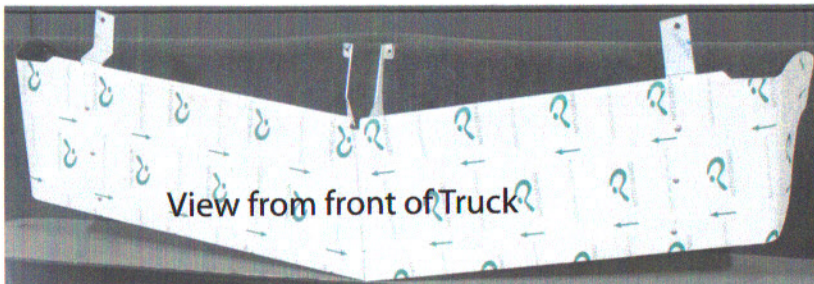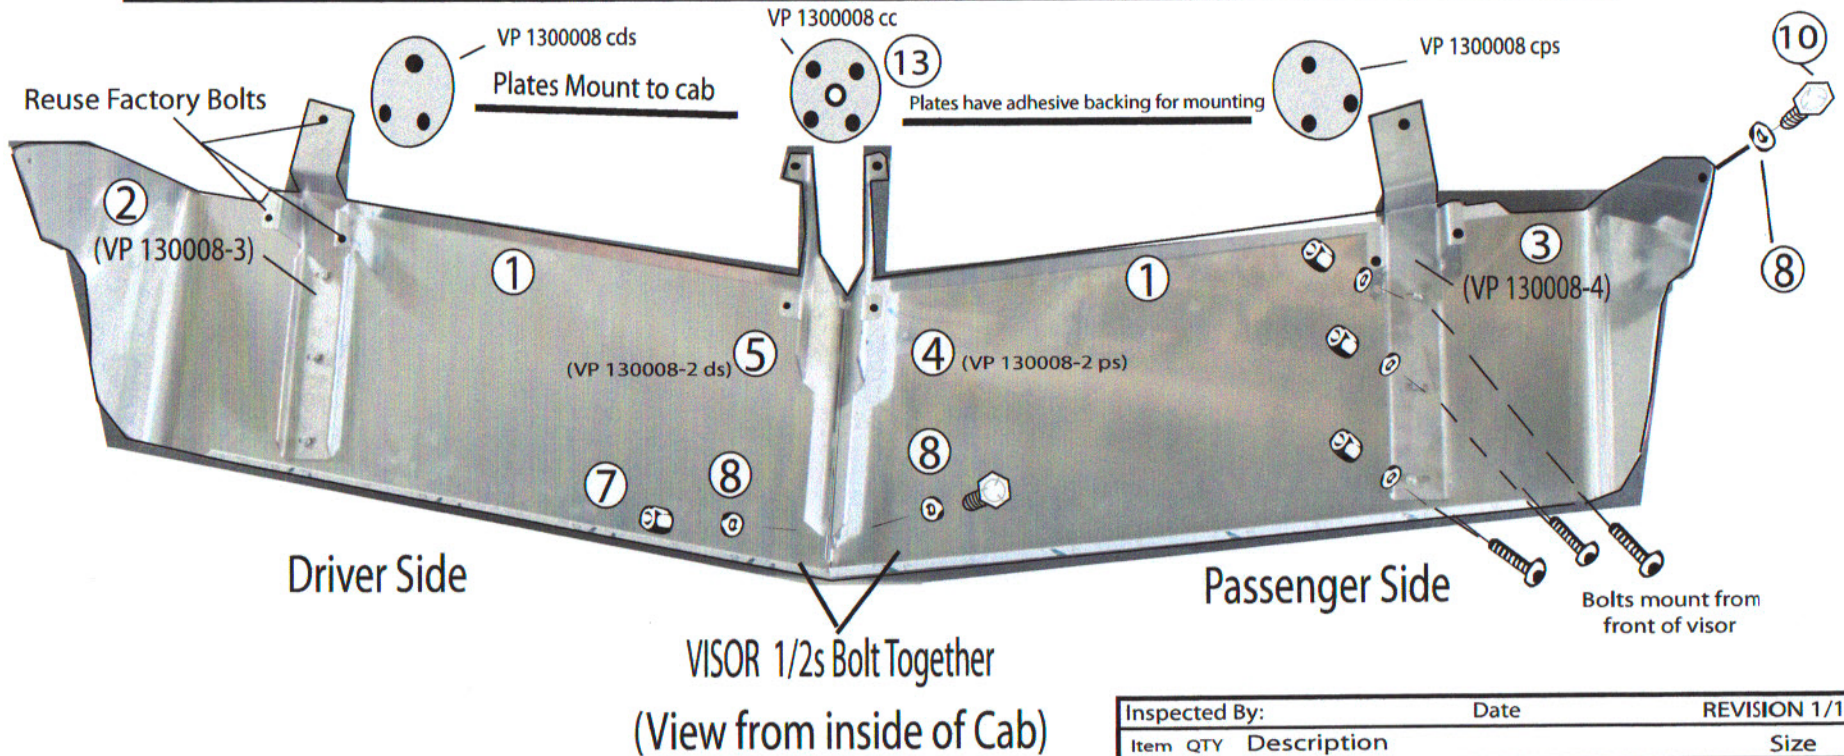

Inspected By:		Date	REVISION 1/13
Item	QTY	Description	Size
①	2	Visor body Halve	13.5" x 35"
②	1	Outer Visor Brkt DS (VP 130008-3)	3" x 19"
③	1	Outer Visor Brkt PS (VP 130008-4)	3" x 19"
④	1	Ctr Visor Brkt Passenger Side (VP 130008-2 ps)	1.5" x 20"
⑤	1	Ctr Visor Bracket Driver Side (VP 130008-2 ds)	1.5" x 20"
⑥	3	Hex Head Bolts	1/4 X 20 x 3/4"
⑦	9	Nylock Nuts	1/4 X 20
⑧	14	Washers	1/4 X 20
⑨	6	Truss Heads	1/4 X 20 x 3/4"
⑩	2	Hex Head Bolts	1/4 X 20 x 1"
⑪	2	Rivnuts	1/4 X 20
⑫	1	Rivnut Tool (See directions for use)	
⑬	3	Plate covers (vp130008cps,cds,cc)	With Tape