


# VU194001

A Division of Valley Chrome Plating  
 (800) 354-0976  
[www.wingmaster.com](http://www.wingmaster.com)

## MOUNTING INSTRUCTIONS

1. Center the deflector on your roof from side to side.
2. It should be placed as far back as possible while still setting flat on the roof.
3. Mark the hole locations, and drill 1/2" holes being careful not to drill too deep.
4. Insert the rivnuts into the holes **using silicone** in the holes so your roof doesn't leak.
5. Tighten the rivnuts using the notched nut provided. The rivnut will mushroom against the roof creating a tight seal.
6. Attach the foam to the deflector to prevent damage to your roof and to keep wind from going under the deflector.
7. Reinstall the deflector over the holes and attach with the 5/16" bolts provided.

**IT IS VERY IMPORTANT THAT YOU USE SILICONE OR A SIMILAR SEALANT TO PREVENT WATER DAMAGE**

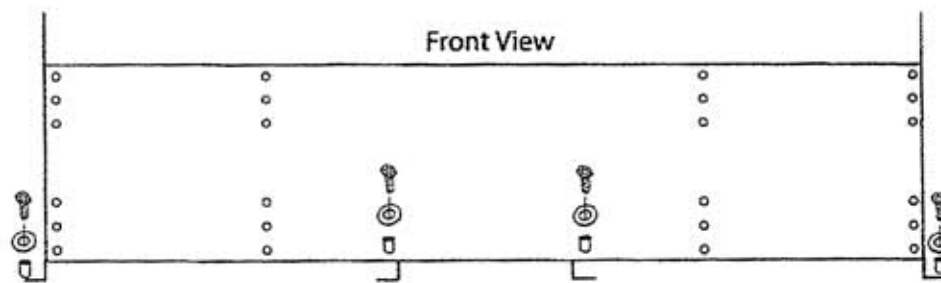

Inspected By: \_\_\_\_\_ Date: \_\_\_\_\_ Revision 1/13

**Part # VU194001**

**Item Qty**

**Description**

- |   |   |                                |
|---|---|--------------------------------|
| 1 | 8 | 5/16" - 18"x 1-1/2" tap bolt   |
| 2 | 8 | 5/16" flat washers             |
| 3 | 8 | 5/16" nutsert (rivenut)        |
| 4 | 1 | Rivenut Tool                   |
| 5 | 4 | Strips of 1/8"x16"x1 1/2" foam |