


Protail - Universal VU194002 -Convex Roof Mount

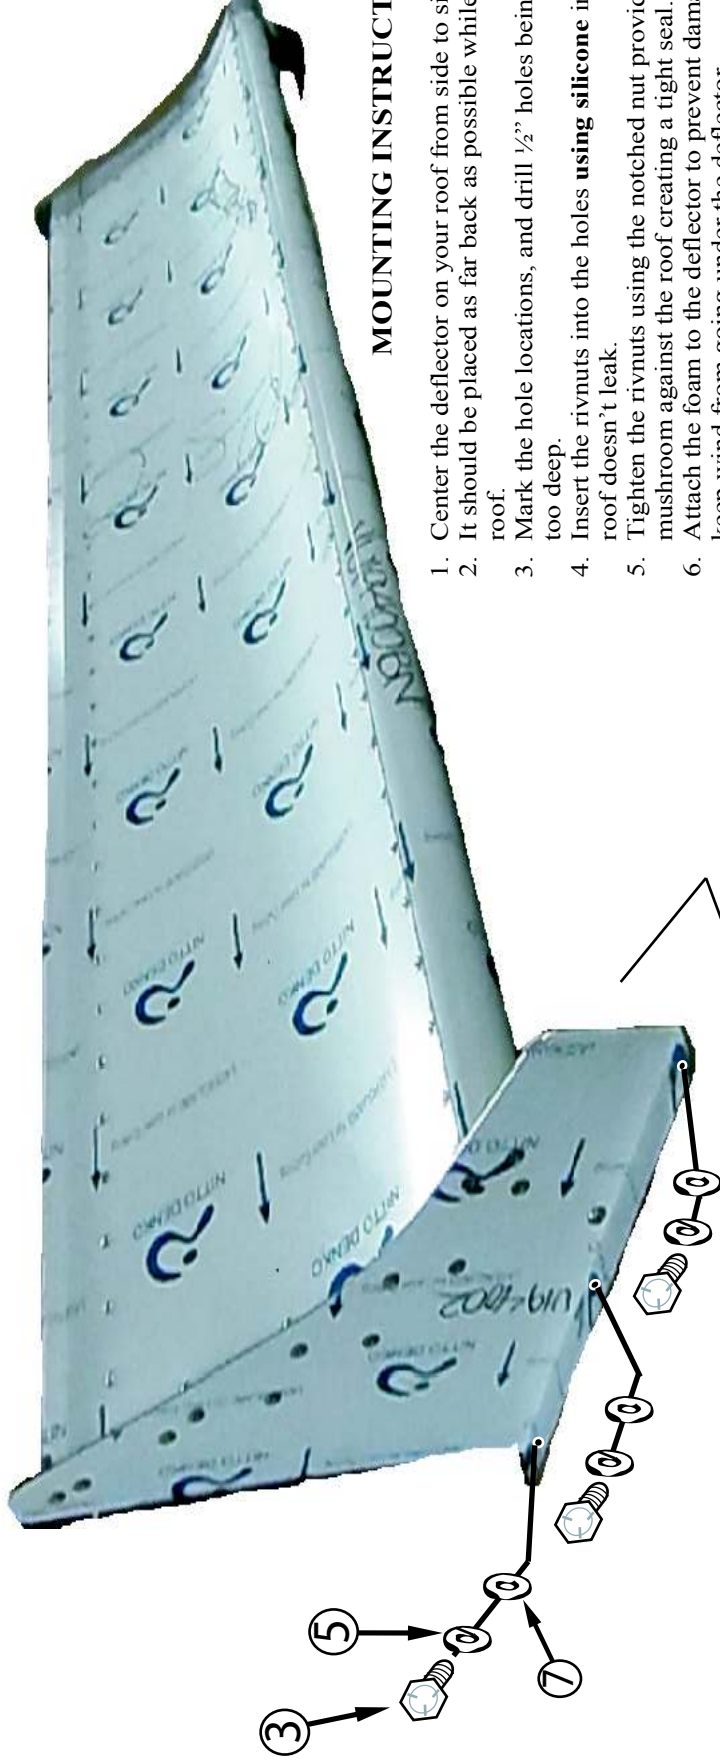

MOUNTING INSTRUCTIONS

1. Center the deflector on your roof from side to side.
2. It should be placed as far back as possible while still setting flat on the roof.
3. Mark the hole locations, and drill 1/2" holes being careful not to drill too deep.
4. Insert the rivnuts into the holes **using silicone** in the holes so your roof doesn't leak.
5. Tighten the rivnuts using the notched nut provided. The rivnut will mushroom against the roof creating a tight seal.
6. Attach the foam to the deflector to prevent damage to your roof and to keep wind from going under the deflector.
7. Reinstall the deflector over the holes and attach with the 5/16" bolts provided.

Convex Roof Mount Protail has higher mounting for clearance purposes.

Brackets attached @ Factory



IT IS VERY IMPORTANT THAT YOU USE SILICONE OR A SIMILAR SEALANT TO PREVENT WATER DAMAGE

Inspected by:	Date	REVISION 1/13
Item Qty	Description	Size
① 1	Protail Wing (w/brackets attached)	70" x 18"
② 2	Support Brackets (VU194002-3)	Attached
③ 6	Hex Head Bolts	5/16" x 18" x 1 1/2"
④ 2	Foam Strips	1" x 18"
⑤ 8	Lock Washer (4 Mounted @ factory)	5/16" x 18"
⑥ 4	Truss Head Machine Screws (factory mounted)	5/16" x 18" x 3/4"
⑦ 8	Washers (2 Mounted @ factory)	5/16" x 18"
⑧ 2	Nylock Nuts (Mounted @ factory)	5/16" x 18"
⑨ 6	Rivnuts	5/16" x 18"
⑩ 1	Rivnut Tool	5/16"

Tool included in hardware

